

Decode Settings



Enter Programming Mode

Decode Area

Whole Area Decoding: The scanner attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.

Aiming Bar Code Decoding: The scanner only decodes the barcode aimed squarely by the aiming pattern. For those using a crosshair aiming pattern, only the barcode aimed by the center of crosshair will be decoded.



Whole Area Decoding **



Aiming Bar Code Decoding

Exit Programming Mode

